


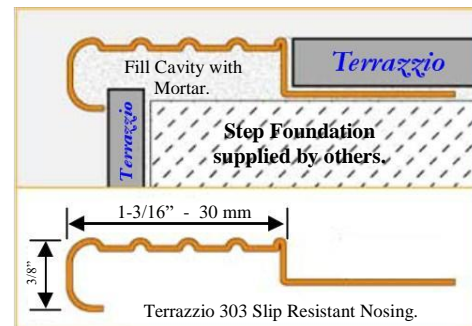

Terrazzo Stair Tread and Riser Installation

1. Cut Terrazzo Stair Tread and Riser to proper depth and length.
2. Install Terrazzo Riser flush with the Terrazzo Stair Tread surface.
3. Apply thin-set mortar (e.g. LATICRETE 254 Platinum) along the edge area above the riser.
4. Fill the cavity on the underside of the Terrazzo Stainless Steel Stair Nosing profile with thin-set mortar.
5. Press Terrazzo Stainless Steel Stair Nosing completely into the thin-set mortar and align, making sure that the front edge of the Terrazzo Stainless Steel Stair Nosing profile overlaps the riser tile.
6. Completely cover the Terrazzo Stainless Steel Stair Nosing perforated anchoring leg and the Terrazzo Tread area with thin-set mortar.
7. Solidly embed the Terrazzo Stair Tread so that the Terrazzo surface is flush with the top of the Terrazzo Stainless Steel Stair Nosing. **Note: the Stainless Steel Stair Nosing should not be higher than the Terrazzo Stair Tread, but rather flush or up to approximately 1/32" (1 mm) lower.**
8. A joint of approximately 1/16" - 1/8" (1.5 - 3 mm) should be left between the Terrazzo Stair Tread and the Stainless Steel profile.



9. Fill the joint completely with grout (e.g. LATICRETE Perma Color Grout).

When Terrazzo Stainless Steel Stair Nosing is integrated into screed layers, the profile must be completely embedded in the mortar. The trapezoid-perforated anchoring leg must be covered with at least 9/16" (15mm) of mortar.

10. When using surface coatings, Terrazzo Stainless Steel Stair Nosing is adhered to the edge of the Terrazzo Stair Tread and adjusted in such a way that the front edge of the profile is flush with the riser. The trapezoid-perforated anchoring leg is covered completely with the surface coating, so that the finished surface is just flush with the profile.

Terrazzo®

THE AUTHENTIC LARGE FORMAT TERRAZZO TILE